



## DRYERS

- 1 Place item(s) in dryer and close door.
- 2 Place the Liquid-Card where indicated on machine. Balance will be displayed.
- 3 Select Temperature
- 4 Press Start
- 5 Remove Card

### Costs

Small Dryers (14 kg)	\$ 5.00 - 25 minutes
Large Dryers (22 kg)	\$ 6.00 - 25 minutes
Super Large Dryers (34kg)	\$ 7.00 - 25 minutes

### Note

To check if clothes are dry, door may be opened at any time, Drying will resume once you close the door and press start.

### Extra Drying Time

For extra drying place card back on machine before cycle is finished. Press Start.

\$1 will be deducted which will give an extra:

- 7 minutes on small dryers
- 6 minutes on large dryers
- 5 minutes on super large dryers

**A full drying charge will occur if Liquid-Card is placed back onto display terminal after cycle has completed.**

A regular load takes approximately 25 minutes  
Heavy towels and items may take longer.

## IMPORTANT

Please check care labels and select heat setting carefully.

### Dryer Temperatures

High 87°C / Med 65°C  
Low 55°C / Delicates 48°C